
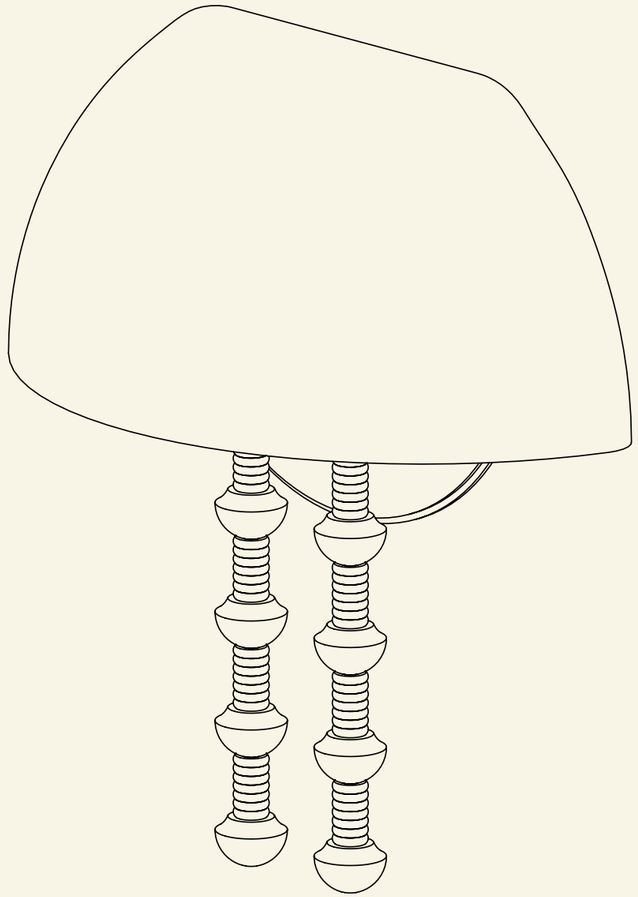


AKNER • SCONCE

2350 BROADWAY SUITE 404 NEW YORK, NY 10024
SUPPORT@STUDIOLUDDITE.COM (917) 423 2443

CONTENTS:	SHADE (x1)	DIFFUSER (x1)	BEAD PLATE (x1)	COVER PLATE (x1)	CROSSBAR (x1)	FASTENER KIT (x1)	
LAMPING:	G9 (x1) *NOT INCLUDED			MAX WATTAGE:	10 WATTS		

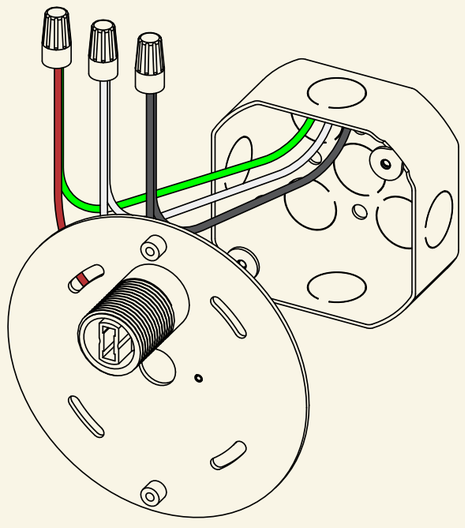


1.

DANGER: ELECTRIC SHOCK HAZARD. BEFORE INSTALLATION DE-ENERGIZE CIRCUIT. INSTALLATION BY A QUALIFIED ELECTRICIAN ONLY.


Connect the copper ground wire first, then connect line and neutral wires.

Colors shown depict typical U.S. installation. International wiring standards may vary.

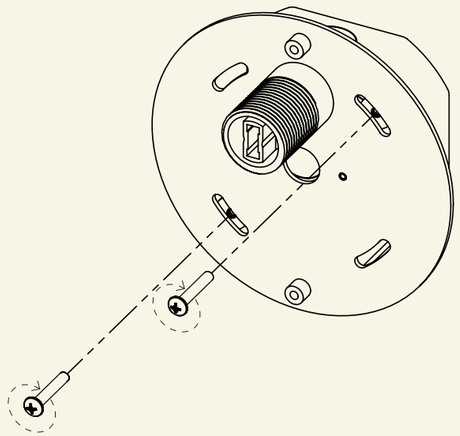


2.

Secure the crossbar to the junction box using screws provided in the fastener kit.

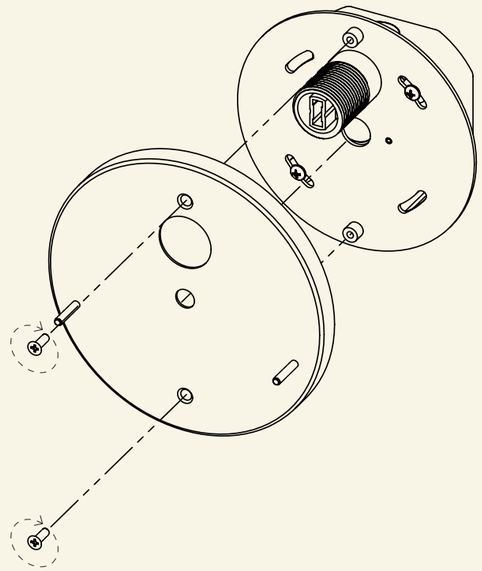

3.


Install the cover plate over the crossbar and secure with the provided screws.

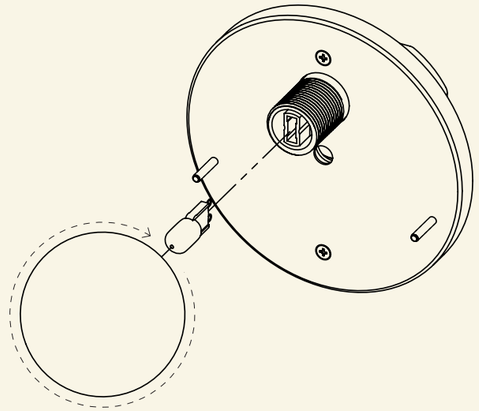

4.


Insert bulb* into socket, then screw the diffuser halfway down the socket stud. The diffuser will be secured in a subsequent step.

*Bulb is not included.

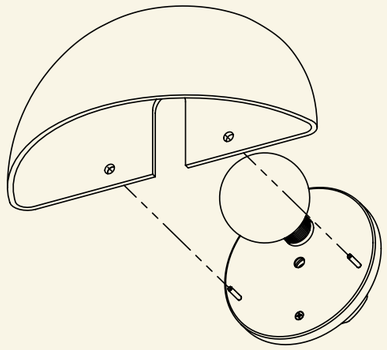


5.

Install the shade by slipping it over the diffuser, then centering the mounting holes on the studs on the cover plate.

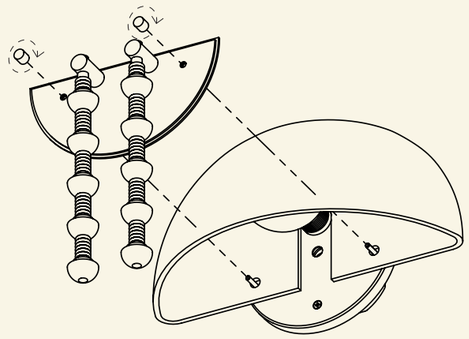


6.

Place the bead over the shade and secure by threading provided finials onto studs in the face plate.

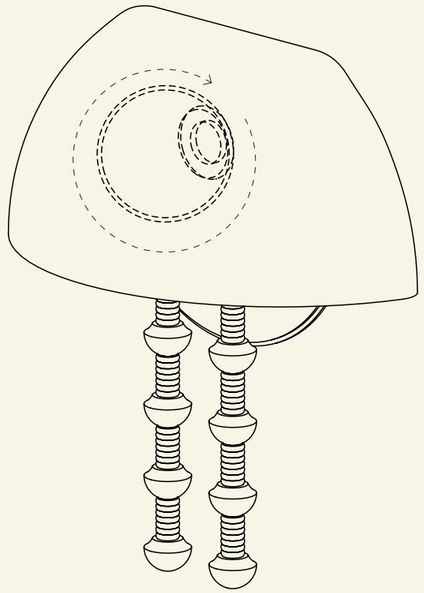

7.

Secure the diffuser by tightening until snug.

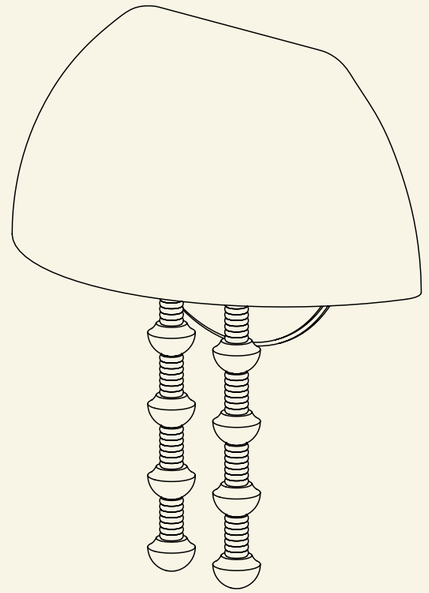

8.

FIXTURE COMPLETED