
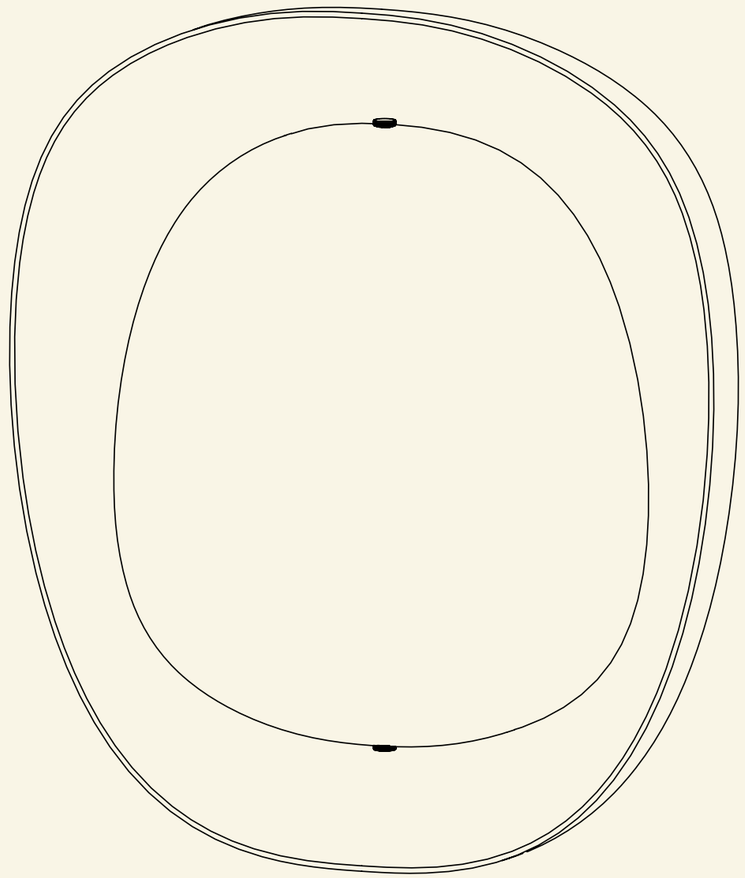


DORMUS • SCONCE

2350 BROADWAY SUITE 404 NEW YORK, NY 10024
SUPPORT@STUDIOLUDDITE.COM (917) 423 2443

CONTENTS:	SCONCE BODY (x1)	BACKPLATE (x1)	GLASS SHADE (x1)	DIFFUSER (x1)	FASTENER KIT (x1)	
LAMPING:	G9 (X1) *NOT INCLUDED			MAX WATTAGE:	10 WATTS	

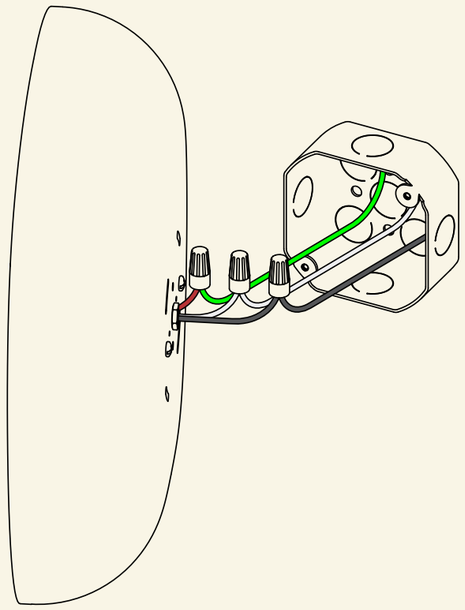


1.

DANGER: ELECTRIC SHOCK HAZARD. BEFORE INSTALLATION DE-ENERGIZE CIRCUIT. INSTALLATION BY A QUALIFIED ELECTRICIAN ONLY.


Connect the copper ground wire first, then connect line and neutral wires.

Colors shown depict typical U.S. installation. International wiring standards may vary.

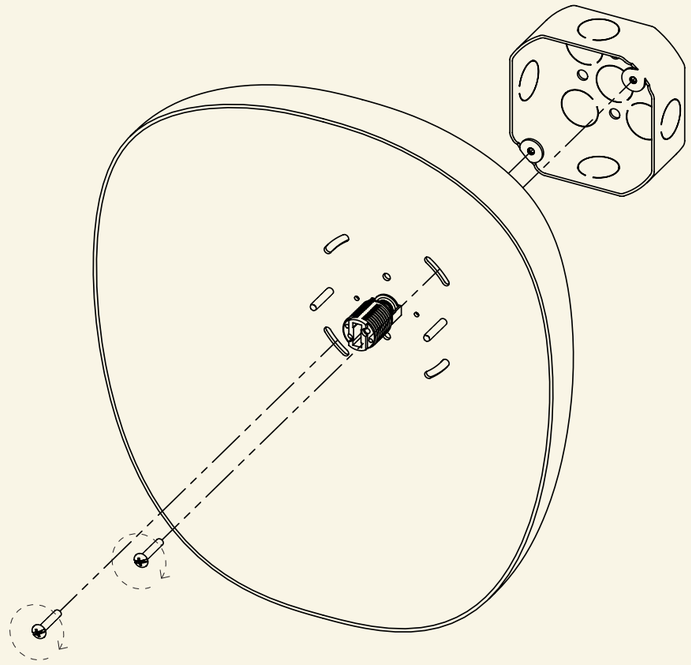


2.

Attach sconce body to junction box with provided screws.

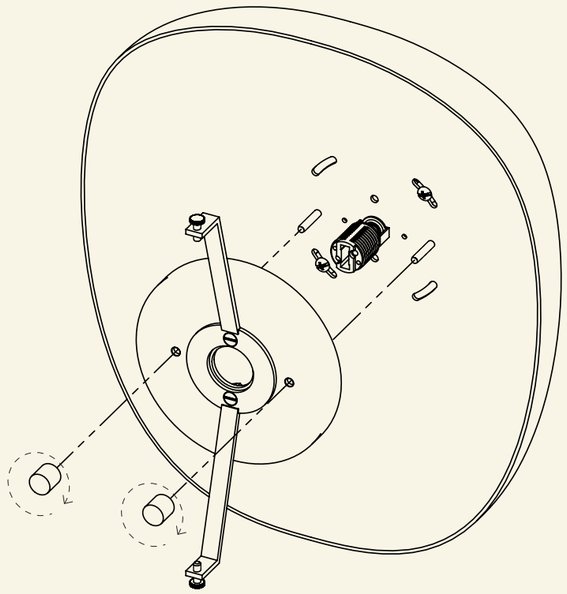

3.


Place backplate on sconce body then secure with provided finials.

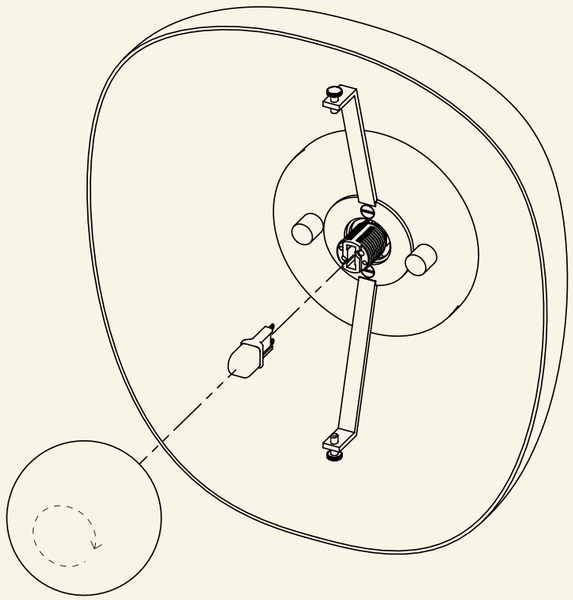

4.


Insert bulb* into socket. Then screw on diffuser and gently tighten.

*Bulb is not included.

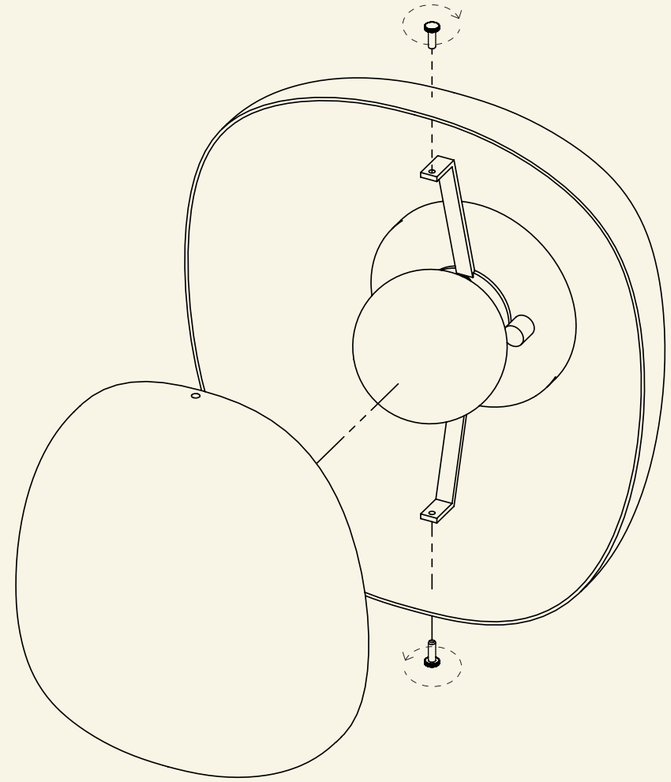

5.

Place glass shade on backplate arms and secure with provided thumbscrews.

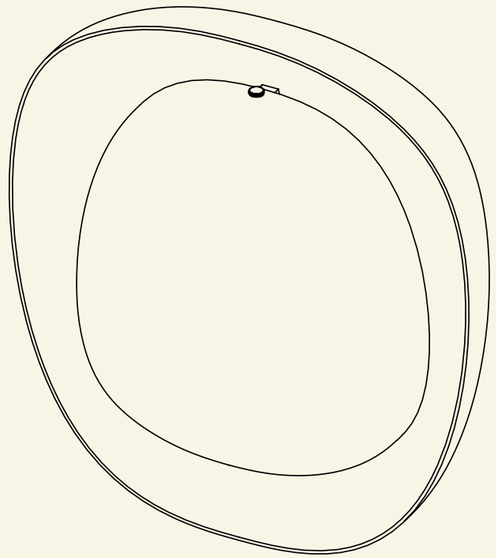

6.

FIXTURE COMPLETED