
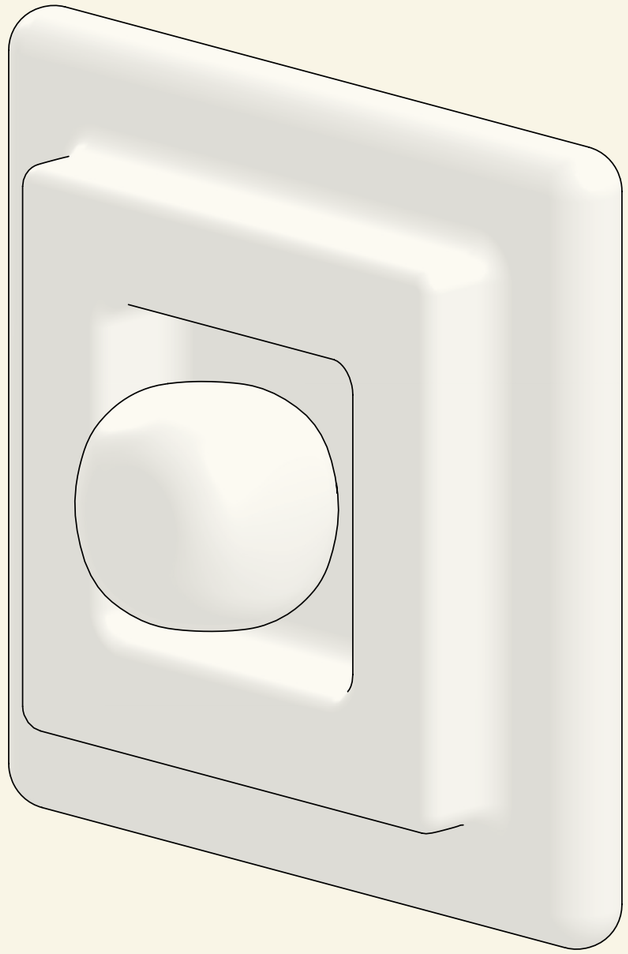


FRANKLIN • SCONCE

2350 BROADWAY SUITE 404 NEW YORK, NY 10024
SUPPORT@STUDIOLUDDITE.COM (917) 423 2443

CONTENTS:	STONE BODY (x1)	DIFFUSER (x1)	CROSSBAR (x1)	FASTENER KIT (x1)		
LAMPING:	G9 (x1) *NOT INCLUDED			MAX WATTAGE:	10 WATTS	

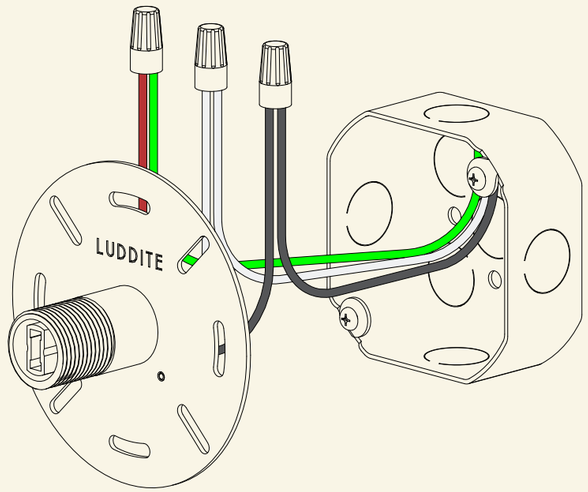


1.

DANGER: ELECTRIC SHOCK HAZARD. BEFORE INSTALLATION DE-ENERGIZE CIRCUIT. INSTALLATION BY A QUALIFIED ELECTRICIAN ONLY.


Connect the copper ground wire first, then connect line and neutral wires.

Colors shown depict typical U.S. installation. International wiring standards may vary.

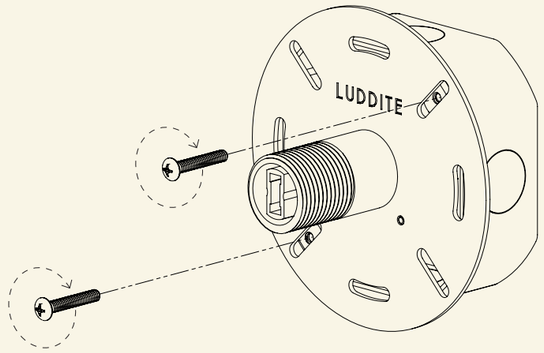


2.

Secure the crossbar to the junction box using screws provided in the fastener kit.

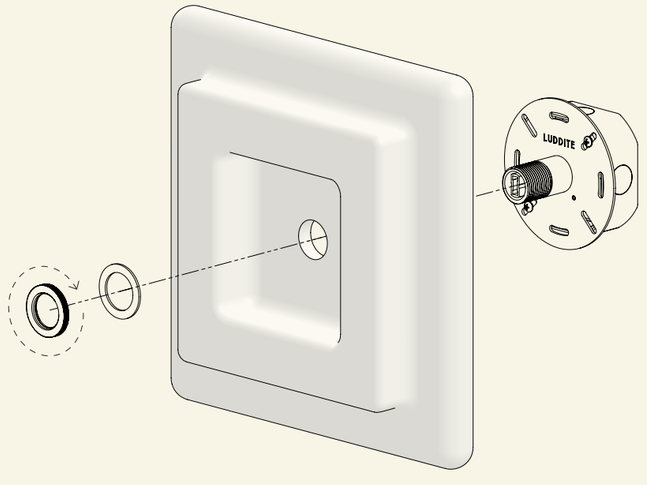

3.


Position the stone on the stud, followed by the rubber washer. Thread the ring onto the stud and firmly tighten to secure the stone.

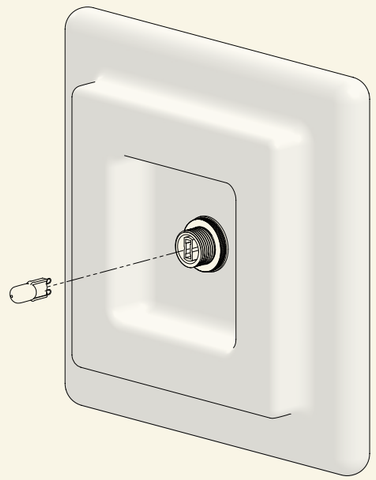

4.


Insert bulb* into socket.

*Bulb is not included.

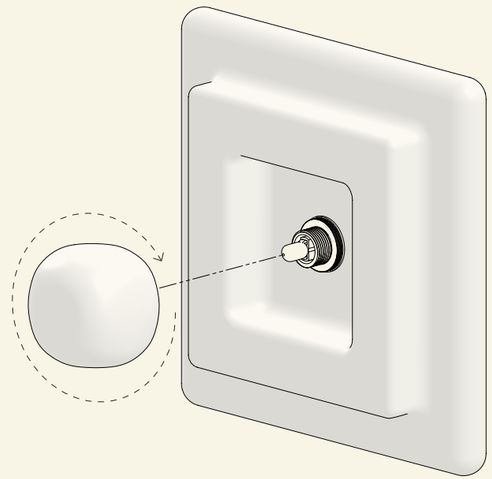

5.

Screw the diffuser onto the stud and tighten.

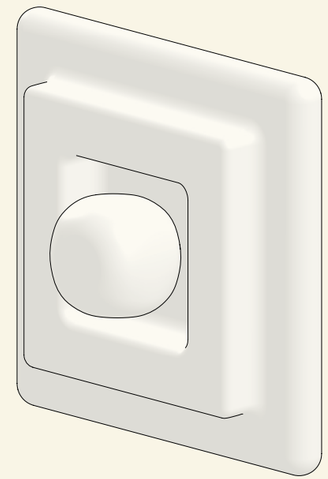

6.

FIXTURE COMPLETED