


MILTON • PENDANT

2350 BROADWAY SUITE 404 NEW YORK, NY 10024
SUPPORT@STUDIOLUDDITE.COM (917) 423 2443


CONTENTS:	SOCKET BODY (x1)	CROSSBAR (x1)	CANOPY (x1)	DIFFUSER (x1)	BOTTOM ASSEMBLY (x1)	DROP STEMS (x4)	FASTENER KIT (x1)
LAMPING:	E12 [120V] / E14 [220-240V] (x4) *NOT INCLUDED			MAX WATTAGE:	10 WATTS PER BULB		

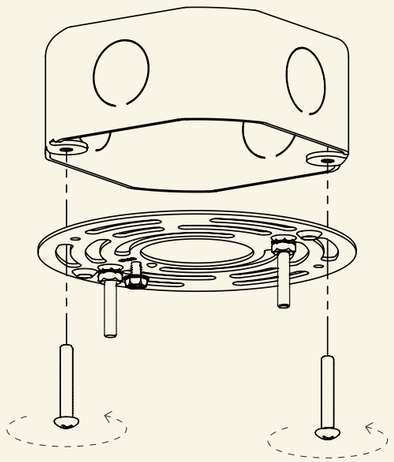

1.

DANGER: ELECTRIC SHOCK HAZARD. BEFORE INSTALLATION DE-ENERGIZE CIRCUIT. INSTALLATION BY A QUALIFIED ELECTRICIAN ONLY.


Attach crossbar to junction box with provided screws.

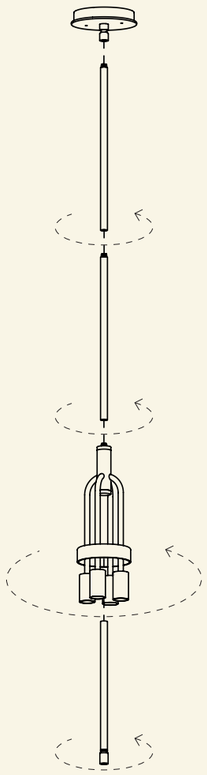

2.

Pass wires from socket body through drop pipes and canopy, then screw pipes together and to socket and canopy. Then screw bottom stem into bottom of socket body.


Stocked fixtures include 3x 12” and 1x 6” drop stems. Additional pipes are available in these and other sizes.

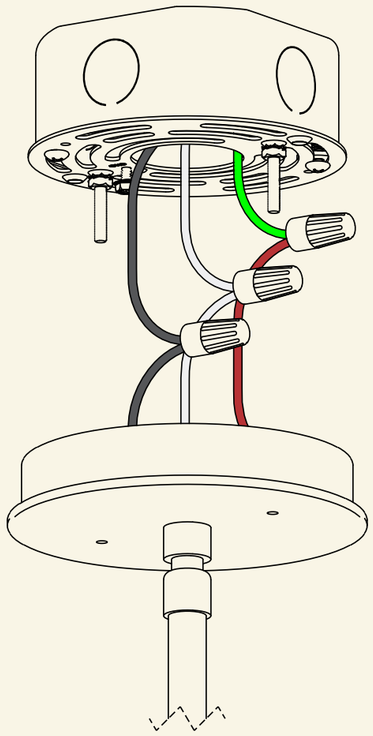

3.


Connect the copper ground wire first, then connect line and neutral wires.

Colors shown depict typical U.S. installation. International wiring standards may vary.

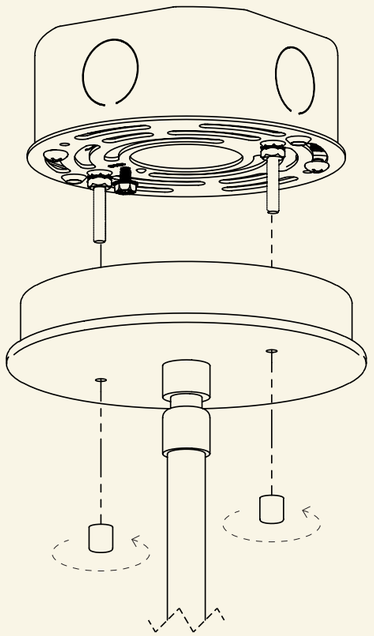


4.

Place canopy over crossbar and secure with provided finials.

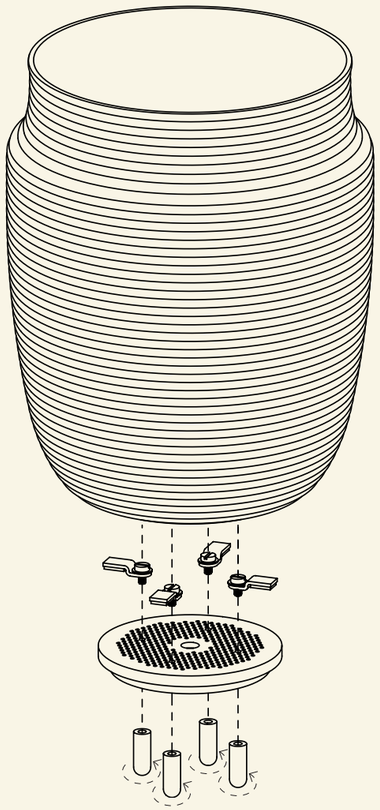

5.


Loosen finials on bottom assembly and rotate clamp arms in. Place glass shade onto plate, rotate clamp arms out to cover bottom lip of shade, and gently tighten to secure.

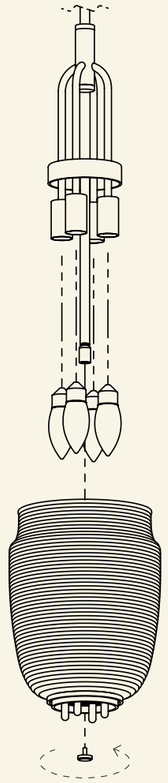

6.

Screw bulbs* into sockets. Place glass shade over socket body and screw bottom finial through bottom assembly to secure.

*Bulbs are not included.

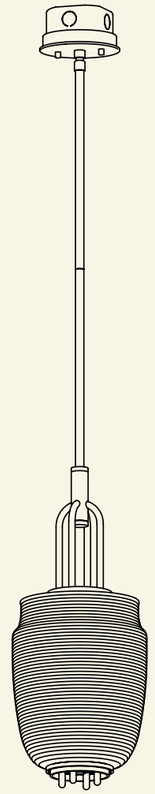

7.

FIXTURE COMPLETED