
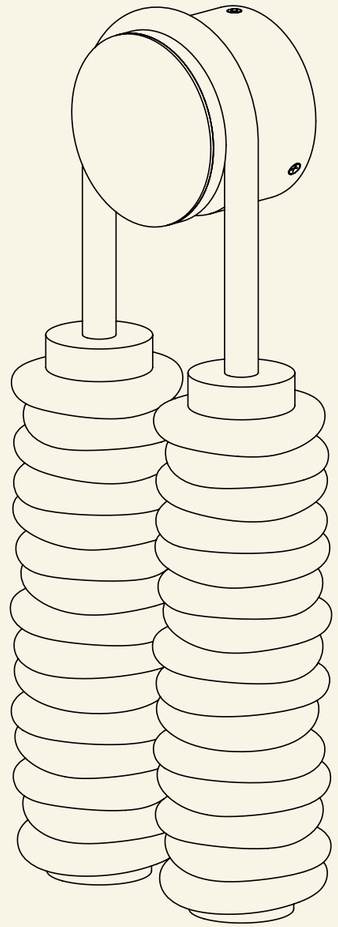


PAYSON • SCONCE

2350 BROADWAY SUITE 404 NEW YORK, NY 10024
SUPPORT@STUDIOLUDDITE.COM (917) 423 2443

CONTENTS:	SCONCE BODY (x1)	CROSSBAR (x1)	STONE PUCK (x30)	FASTENER KIT (x1)		
LAMPING:	INTEGRATED LED (PHASE DIMMABLE)			MAX WATTAGE:	20 WATTS	

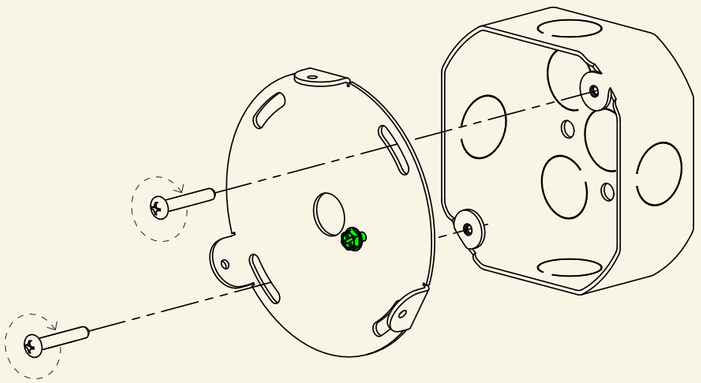


1.

DANGER: ELECTRIC SHOCK HAZARD. BEFORE INSTALLATION DE-ENERGIZE CIRCUIT. INSTALLATION BY A QUALIFIED ELECTRICIAN ONLY.

Before beginning work shut power off.


Attach crossbar to junction box with provided screws.

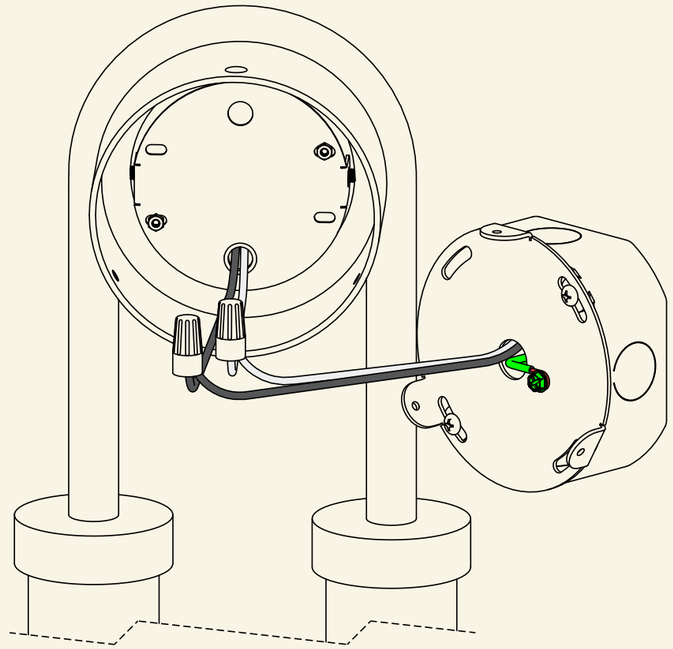

2.


Connect the ground wire from the junction box to the crossbar with the provided green screw, then connect line and neutral wires.

Colors shown depict typical U.S. installation. International wiring standards may vary.

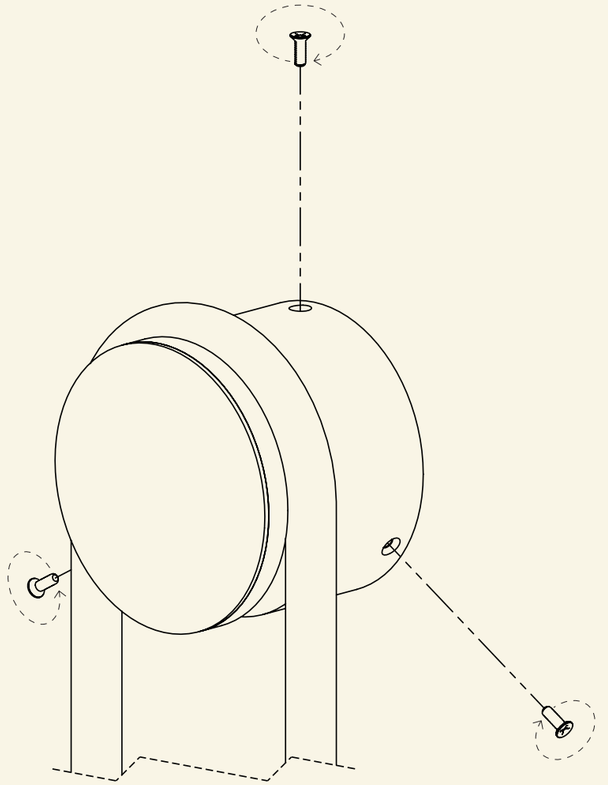


3.

Place sconce body over crossbar and secure with provided screws.

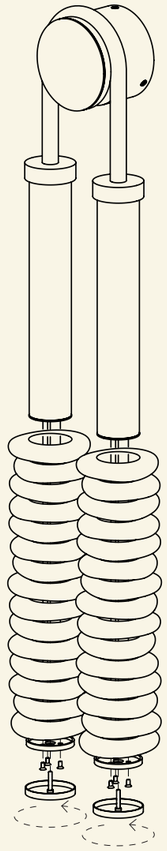


4.

Working on one tube at a time, slide stones up onto sconce body. After the last stone is in placed on each tube, secure the plate with the provided screws, then screw cover plates into the bottom of each tube.

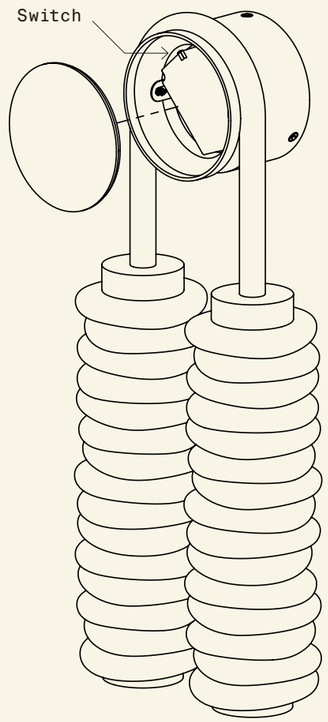

5.

Unscrew front cover and use switch to set desired color tempera-ture, then screw cover back on.

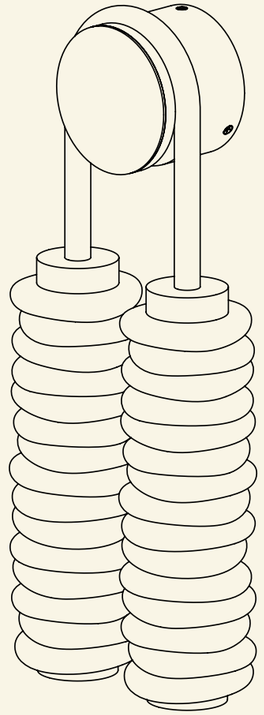

6.

FIXTURE COMPLETED