
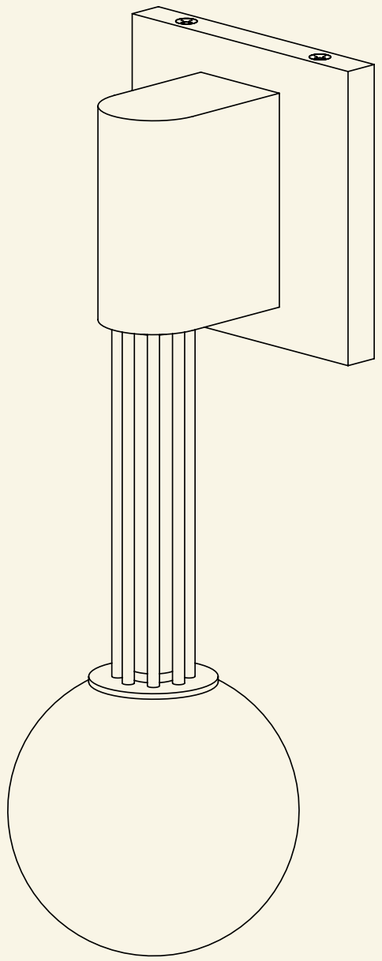


TILLMAN • SCONCE

2350 BROADWAY SUITE 101 NEW YORK, NY 10024
SALES@STUDIOLUDDITE.COM (917) 423 2443


CONTENTS:	SCONCE BODY (x1)	CROSSBAR (x1)	STONE DIFFUSER (x1)	FASTENER KIT (x1)		
LAMPING:	G9 (X1) *NOT INCLUDED			MAX WATTAGE:	10 WATTS	

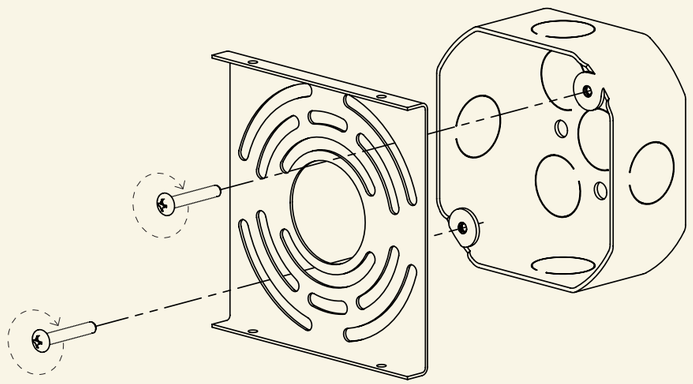

1.

Before beginning work shut power off.


Attach crossbar to junction box with provided screws.

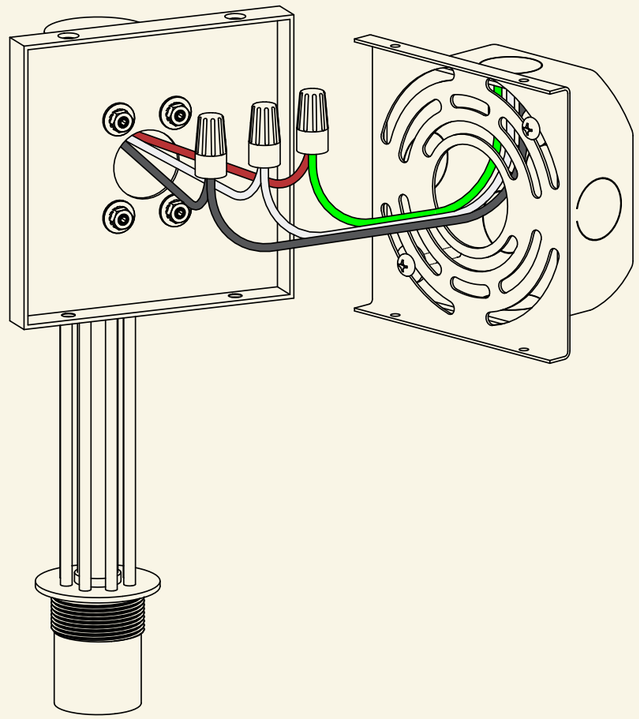

2.


Connect the copper ground wire first, then connect line and neutral wires.

Colors shown depict typical U.S. installation. International wiring standards may vary.

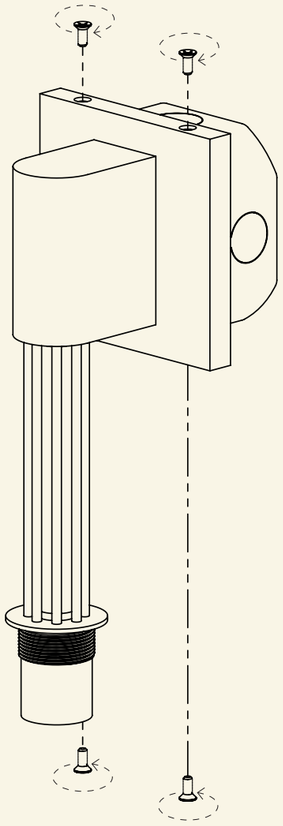

3.


Place sconce body over crossbar and secure with provided screws.

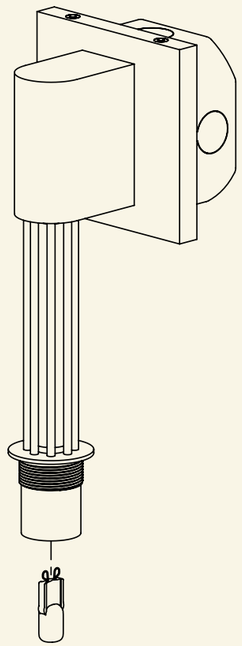

4.


Insert bulb* into socket. Maximum bulb length is 2”.

*Bulb is not included.

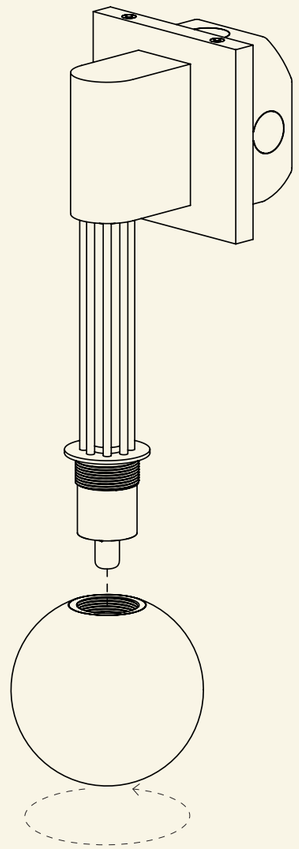

5.

Screw stone diffuser onto sconce body.

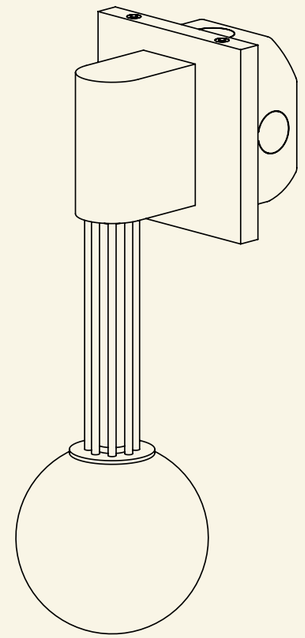

6.

FIXTURE COMPLETED