
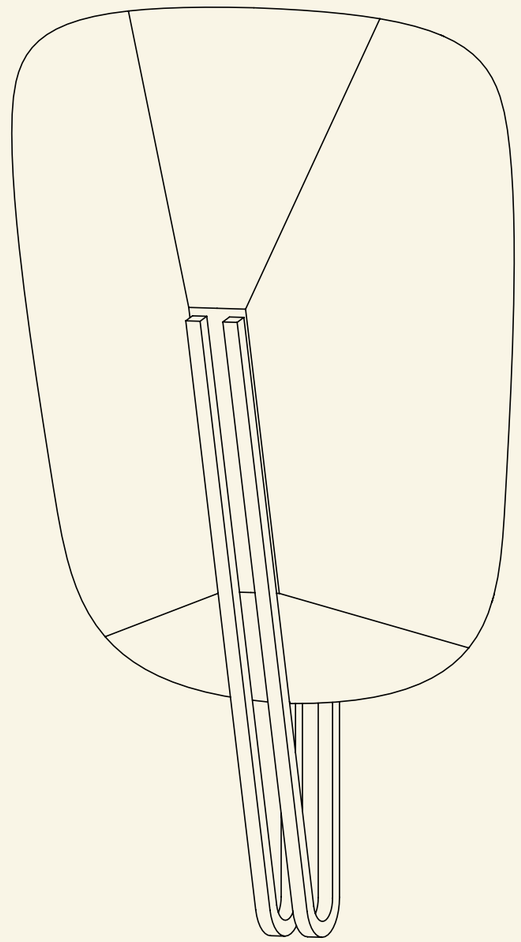


WALKER • SCONCE

2350 BROADWAY SUITE 404 NEW YORK, NY 10024
SUPPORT@STUDIOLUDDITE.COM (917) 423 2443


CONTENTS:	SCONCE BODY (x1)	CROSSBAR (x1)	GLASS DIFFUSER (x1)	SHADE (x1)	FASTENER KIT (x1)		
LAMPING:	G9 (X1) *NOT INCLUDED			MAX WATTAGE:	10 WATTS		

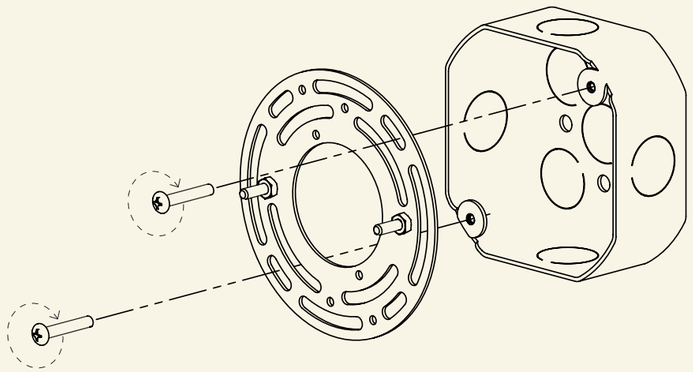

1.

DANGER: ELECTRIC SHOCK HAZARD. BEFORE INSTALLATION DE-ENERGIZE CIRCUIT. INSTALLATION BY A QUALIFIED ELECTRICIAN ONLY.


Attach crossbar to junction box with provided screws.

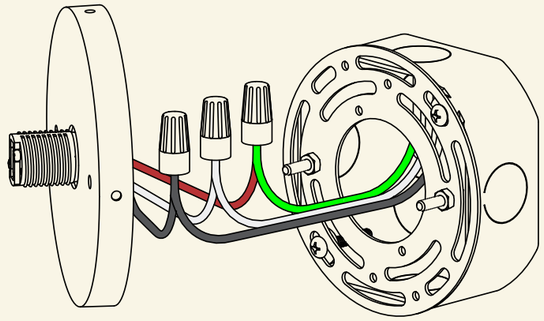

2.

Connect the copper ground wire first, then connect line and neutral wires.

Colors shown depict typical U.S. installation. International wiring standards may vary.

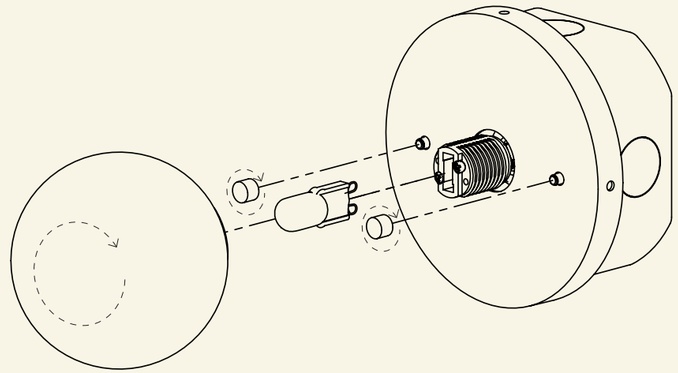


3.

Place sconce body over crossbar and secure with provided finials.


Then insert bulb* into socket and screw on glass diffuser.

*Bulb is not included

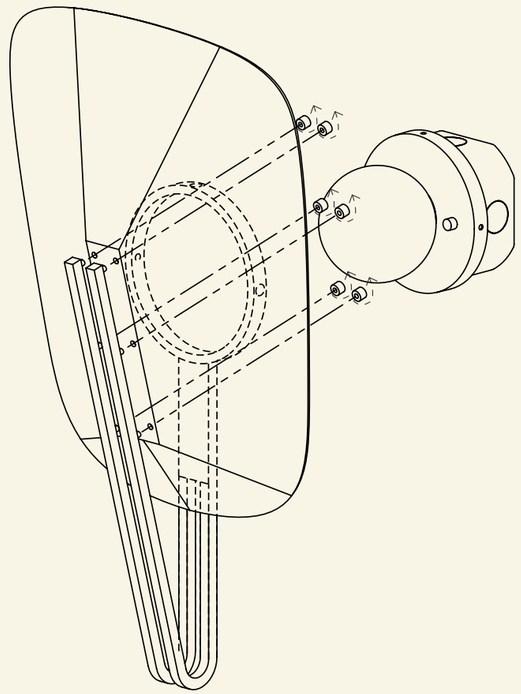

4.


Mount shade to shade arm by passing studs through holes in shade and screwing on provided finials to secure.

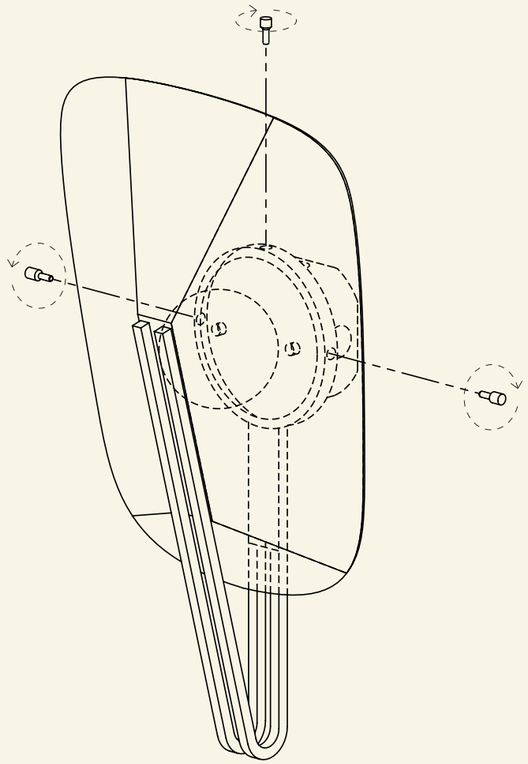

5.

Set shade arm on sconce body then secure with provided thumb screws.

Shade arm may also be mounted with provided socket head screws and allen wrench.

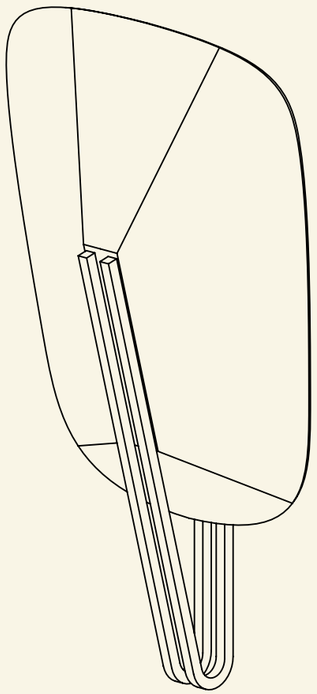

6.

FIXTURE COMPLETED